

User Manual



Universal Carrier Adapter



EN User Manual

Congratulations on purchasing the Hamax Universal Carrier Adapter for Hamax bicycle child seats.

Please read the instructions carefully before assembling or using the child seat.

Keep these instructions in a safe place as they will be useful if you later buy extra equipment for your child seat.



Important!

Please check the user manual of the child seat or www.hamax.no if the child seat is compatible with this carrier adapter.



max 22 kg



Ø=10 - 20 mm

120 - 175 mm *

* CARESS 120 - 160 mm

FR	<i>Manuel de l'utilisateur</i>
DE	<i>Gebrauchsanleitung</i>
NO	<i>Monterings- og bruksanvisning</i>
CS	<i>Návod k použití</i>
DA	<i>Brugervejledning</i>
ES	<i>Manual del usuario</i>
FI	<i>Käyttöohjeet</i>
HR	<i>Korisnički Priručnik</i>
HU	<i>Felhasználói útmutató</i>
IT	<i>Manuale d'uso</i>
KO	<i>사용자 설명서</i>
NL	<i>Gebruikshandleiding</i>
PL	<i>Instrukcja montażu i użytkowania</i>
PT	<i>Instruções de utilização</i>
RO	<i>Manualul utilizatorului</i>
SR	<i>Uputstvo za korisnike</i>
RU	<i>Руководство пользователя</i>
SV	<i>Bruksanvisning</i>
SL	<i>Uporabniški priročnik</i>
SK	<i>Návod na použitie</i>
BG	<i>Ръководство за потребителя</i>
UK	<i>Посібник користувача</i>
TR	<i>Kullanım Kılavuzu</i>
LV	<i>Lietotāja rokasgrāmata</i>



EN Important!



INSTALLATION

- Can be mounted on bicycles with a luggage carrier which meets the EN 11243 standard (25 Kg or more).
- Can be mounted on bicycles with a luggage carrier with an outer width between 120 and 175 mm.
- Can be mounted on bicycles with a luggage carrier with round tube profile with diameter between 10 and 20 mm.
- Other tube shape: Make sure that the carrier adapter has good grip and fitment on the carrier.
- Cannot be mounted on bicycles with a luggage carrier that does not have straight and parallel sides.
- Cannot be mounted on bicycles with a luggage carrier with a tube diameter of less than 10 mm.
- Cannot be mounted on bicycles with a luggage carrier with a tube diameter of more than 20 mm.
- Cannot be used on cycles fitted with shock absorbers
- Make sure that the carrier adapter does not touch or damages the battery of the E-bike.
- The seat should only be mounted on a bicycle which is suitable for this kind of load. Please ask your bicycle supplier for detailed advice.
- The child seat is fitted on the luggage carrier of the bike with the carrier adapter. The bolts, accessible from the right side of the carrier adapter, must be tightened hard enough to fix the seat securely and prevent it from sliding. Make it a rule to check this before starting a trip with the bike.
- Make sure the carrier adapter is well tightened and check this at regular intervals.
- The additional safety strap needs to be secured to the bicycle frame or seat post.
- For optimal comfort and safety of the child, ensure that the seat does not slope forwards, so that the child does not tend to slide out of it.
- Check all parts of the bike that they function correctly with the bicycle seat mounted.

USE

- To take a child on a bicycle, the rider must normally be over 16 years. Check your national laws and regulations.
- The child seat is approved for children from about 9 months to 6 years or maximum 22 kg weight. Ensure that you re-check from time to time that the child's weight and size do not exceed the maximum capacity of the seat.
- Do not carry a child that is too young to sit safely in the seat. The child must be able to sit unaided for a longer period; at least as long as the intended bicycle journey. Please observe the recommended minimum age. If you are uncertain, please consult a paediatrician.
- Ensure that it is not possible for any part of the child's body or clothing to come into contact with any moving part of the seat or cycle and to re-check as the child grows, due to the danger of entrapment of feet in the wheel and of the finders in brake mechanisms and sprung saddles. The child seat gives good side and feet protection. However, you are recommended to buy and fit a closed wheel guard/chain guard. You can buy this at your bicycle dealer.
- Check there are no sharp objects, such as split wires, on the bicycle that can harm the child.

- Ensure that the restraint system is not loose or able to become trapped in any moving parts particularly the wheels, including when the cycle is ridden without a child in the seat.
- Always use the safety belt/restraint system, ensuring the child is restrained in the seat.
- A child sitting in a child seat should be dressed more warmly than the rider.
- The child should be protected against rain with suitable waterproof garments.
- Remember to put the child's helmet on before starting your bicycle trip.
- Remember that the child seat can get very hot standing out in the sunshine, so check the child seat before placing your child in it.
- When transporting the bicycle by car (outside the car) remove the seat. Air turbulence might damage the seat or loosen its fastenings to the cycle, which could result in an accident.

WARNINGS


- WARNING: Do not attach extra luggage or equipment to the child seat, as this could lead to the total load exceeding 22 kg. We recommend that extra luggage is attached at the front of the bicycle.
- WARNING: Do not modify the product. This will automatically invalidate the guarantee and the manufacturer's product liability will lapse.
- WARNING: Be aware that the load of a child in the child seat may alter the bicycle's stability and handling characteristics, particularly when steering and braking.
- WARNING: Never leave the bicycle parked with a child in the seat unattended.
- WARNING: Do not use the product if any parts are broken.
- WARNING: Assemble the foot protections and make sure they are well attached.
- WARNING: The total load of the seat with child and baggage on the carrier should never exceed the maximum load of the luggage carrier.
- WARNING: The additional safety strap should be kept fastened to the bike whenever the seat is mounted on the bicycle.
- WARNING: For safety reasons must this seat only be fitted to luggage carriers conforming to EN 11243.
- WARNING: Make sure any exposed rear saddle springs are covered.

MAINTENANCE

- When cleaning the product, use only lukewarm soapy water.
- If the seat has been involved in an accident, is damaged, has fallen to the ground or if the bicycle has fallen with the seat attached, contact your dealer to check that it can still be used. Damaged parts must always be replaced. Contact your dealer if you are not sure how to fit the new parts.

We wish you and your child many enjoyable bicycle trips with your Hamax child seat!


Best regards from us at Hamax.

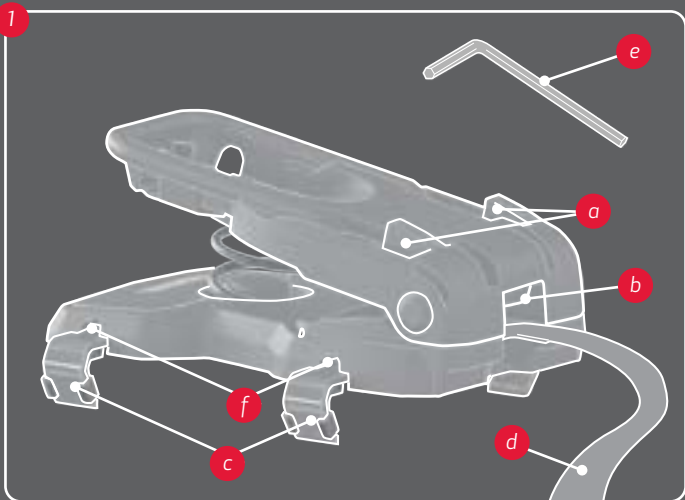

1. Carrier Adapter
 - a) Hooks
 - b) Release button
 - c) Clamps (4x)
 - d) Safety strap
 - e) Hex tool
 - f) Bolts

User Manual

Universal Carrier Adapter

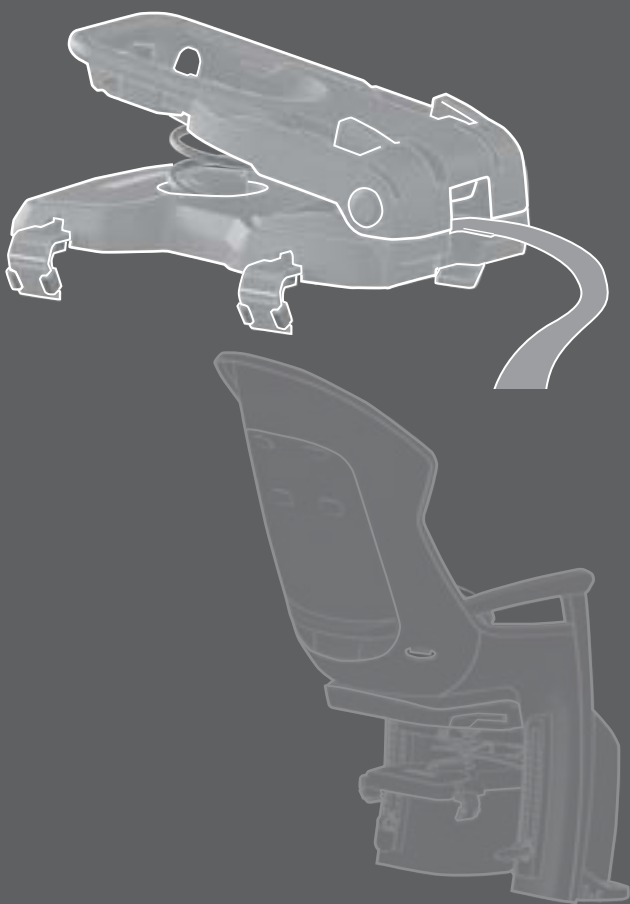


A

Mount the adapter on the carrier

Unscrew the 2 bolts (1f) with the Hex tool (1e) until the 4 clamps (1c) fit over the carrier rack of the bicycle. Place the Carrier Adapter on the carrier rack making sure the clamps (1c) are on the outer side of the carrier rack.

Do not tighten the bolts (1f) completely yet.

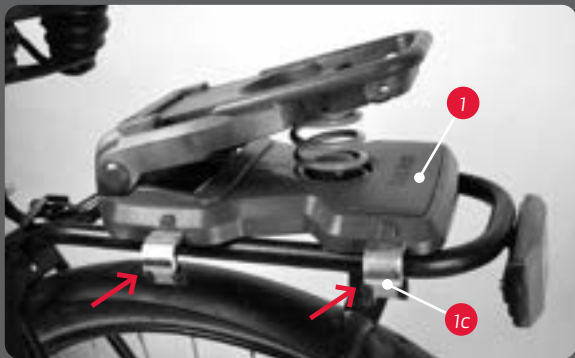


B

Mount the seat on the adapter

To mount the seat on the adapter, depending on the type of seat:

Take out the locking pin (3)

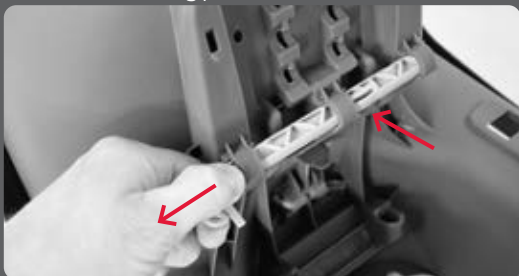

Or open the side levers (2)



Or open the hooks (4) by pressing the button (5).



Then the seat hooks under the pins in the front of the adapter (1a).
Slide the seat forward over the Carrier Adapter until it clicks in the front lock.




C

Lock the seat on the adapter

Set the seat down on the adapter. Then to make the rear connection:

Insert and lock the locking pin (3)

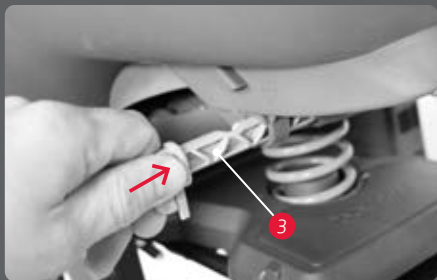

Or close the 2 side levers (2)



Or the hooks of Caress will lock automatically when the seat is pushed down. When the system is closed, the release button (4) will stick out at the back.



Important!
Check if the seat is firmly attached to the adapter.

D

Adjusting the seat

Position the seat (1) and adapter as much towards the front as possible while still leaving room for reclining the seat (2) if needed.




E

Fix the adapter on the luggage carrier

Tighten the rear bolt (1f) first, with the seat still on the carrier adapter. Remove the seat and tighten the front clamps. Minimal tightening torque is 2 Nm.


Make sure that the clamps have a good grip on the carrier and are not blocked by the frame or the E-bike battery (1c).

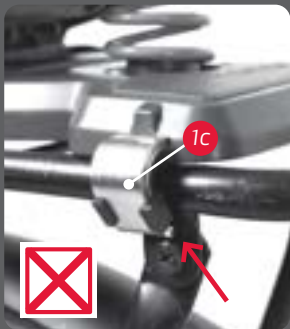

F

Attach the safety strap

The additional safety strap needs to be secured to the frame or seat post. Lead the safety strap (1d) through the holes as shown in pic. 1 & 2, then pull at the end to tighten it.

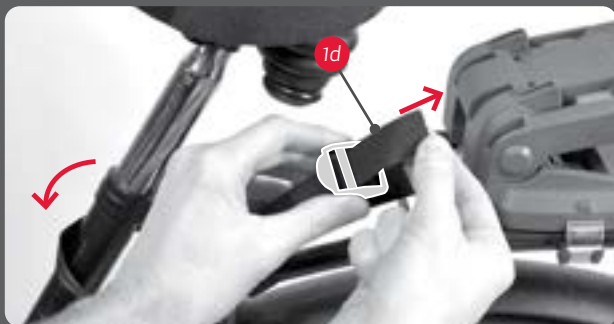


G

Before embarking on a bicycle trip

- Adjust the safety belt (2)
- Adjust the foot rests and fasten foot straps (3)
- Check if the Carrier Adapter (1) is secured well and does not slide
- Check that the seat is fixed well to the Carrier Adapter.
- Always wear helmets, child and adult.



NB! Never leave your child alone in the bicycle child seat. Please note that the kick stand is not a suitable support to hold the bicycle with a child in the seat.

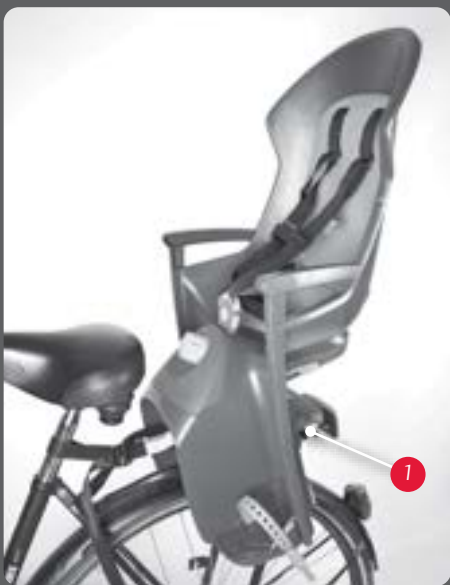


H

How to take off the Carrier Adapter

Open the side levers (2) on both sides of the seat, unlock and take out the locking pin (3) or unlock the hooks by pushing the button (4).

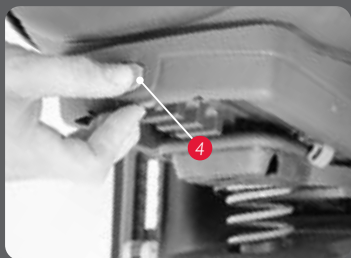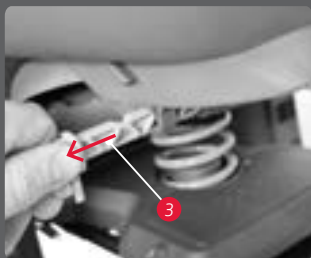


To take the seat off, press the release button (1b) up and hold. Now rotate the rear of the seat upwards (a) and then pull it (b) rearwards.

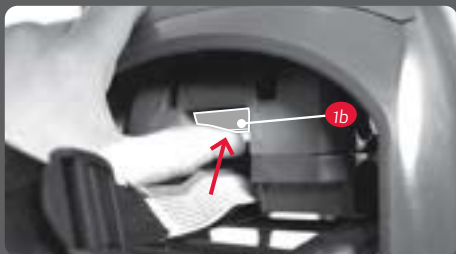

Moving the seat between bicycles

With an extra adapter you can quickly move this seat from one bicycle to the next. You may also mount the seat on a bicycle frame using the Hamax frame bracket, suitable for tube diameter of 28-40 mm. This can be useful if your family uses different types of bicycles.

Full assembly instructions follows the product when purchased, and can also be downloaded from www.hamax.com.

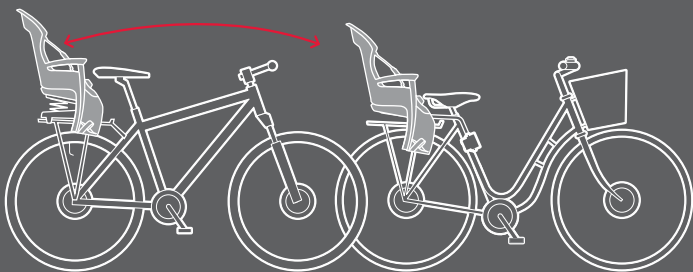



Hamax id: 11931, Rev. 002, User manual Carrier Adapter

Hamax AS

Visiting address:
Vålerveien 159
N-1599 Moss
Norway

Tel.: +47 69 23 38 38
email: kontakt@hamax.no
www.hamax.com

Authorized EU representative
according to EU 2023/988:

HTS Besafe AS

Keizerstraat 3
3512 Utrecht, the Netherlands
e-mail: productsafety@hamax.com